


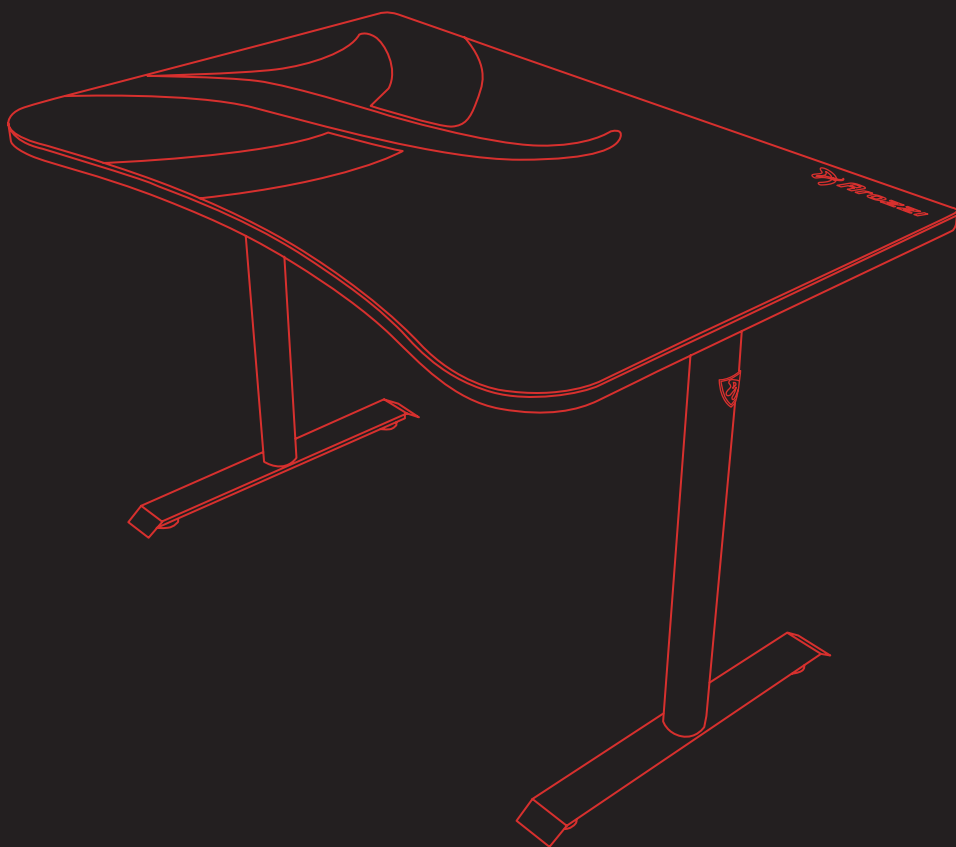
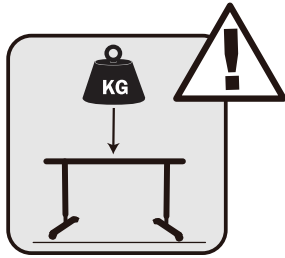
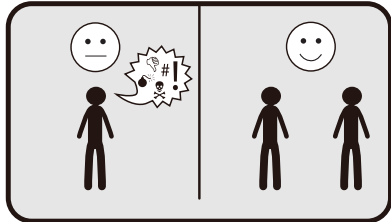


# ASSEMBLY GUIDE


## ARENA FRATELLO

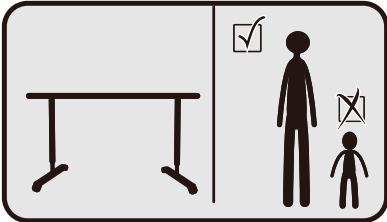

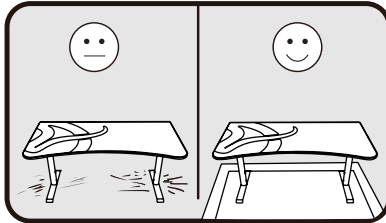

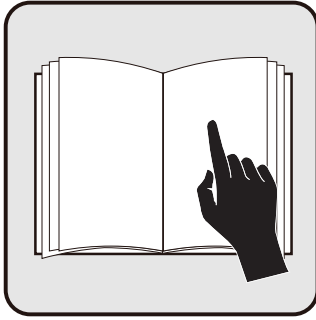

**X8**

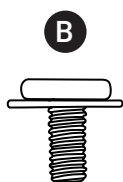





**X8**





**X8**




**X8**

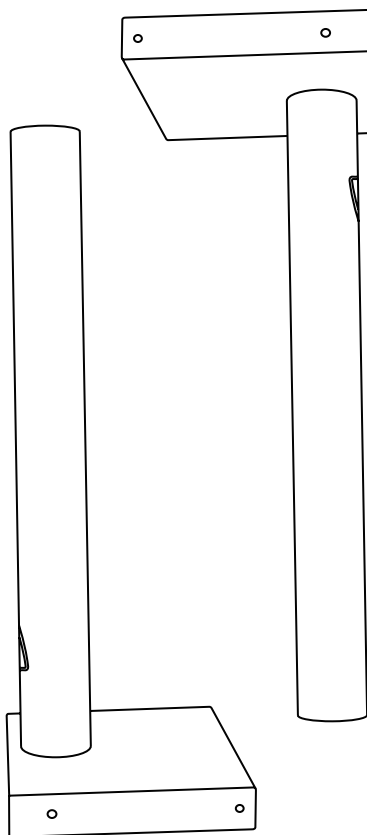



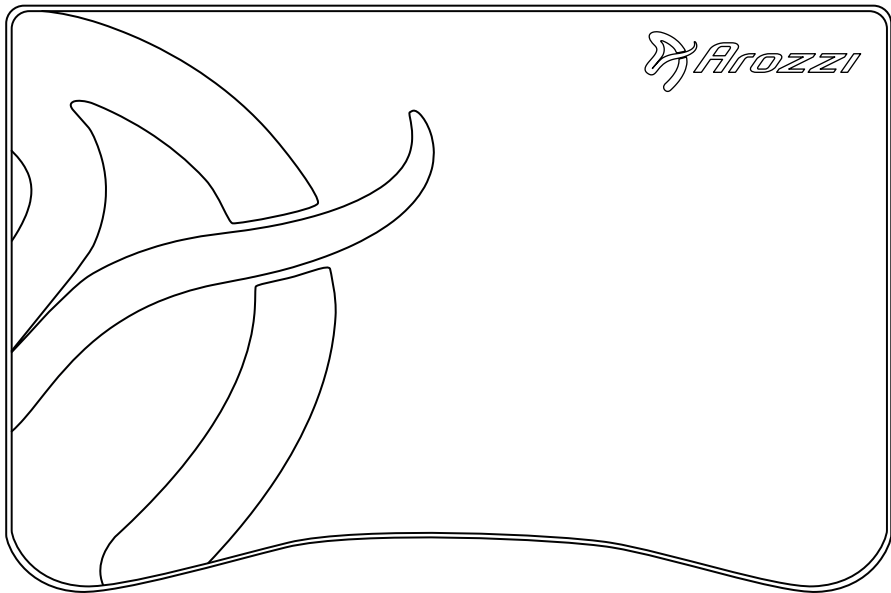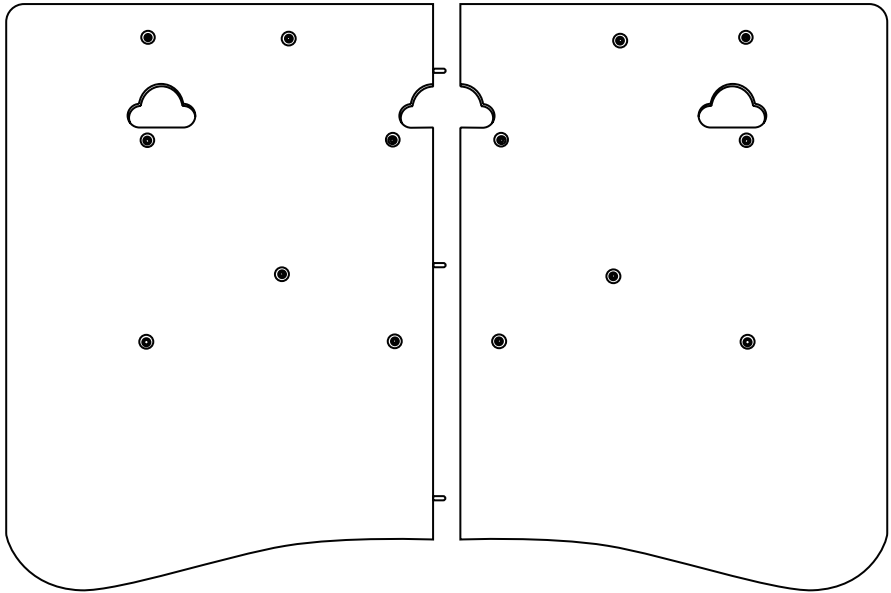

1

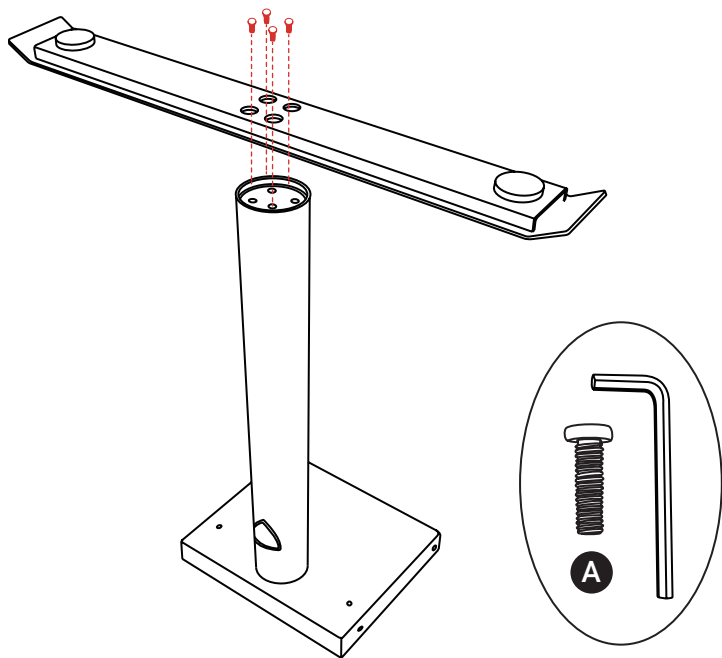


2

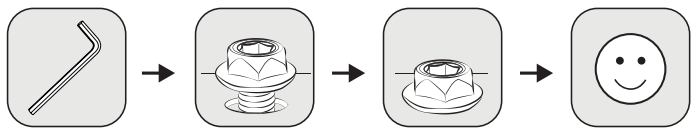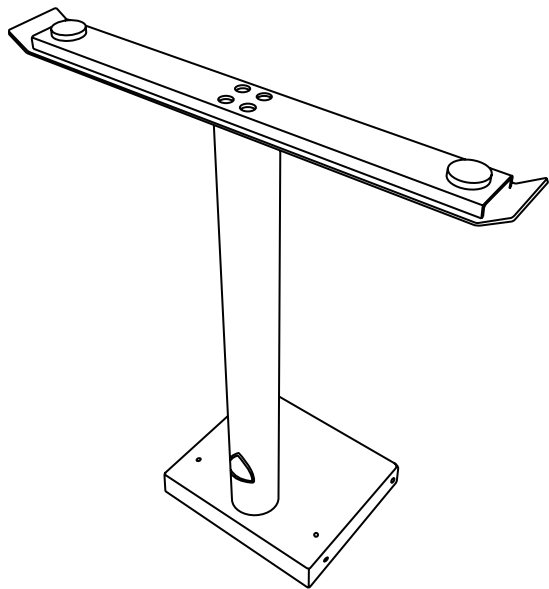




## ATTENTION!


Do not fully screw in the bolts until **step 10**. For more details, look at the video:

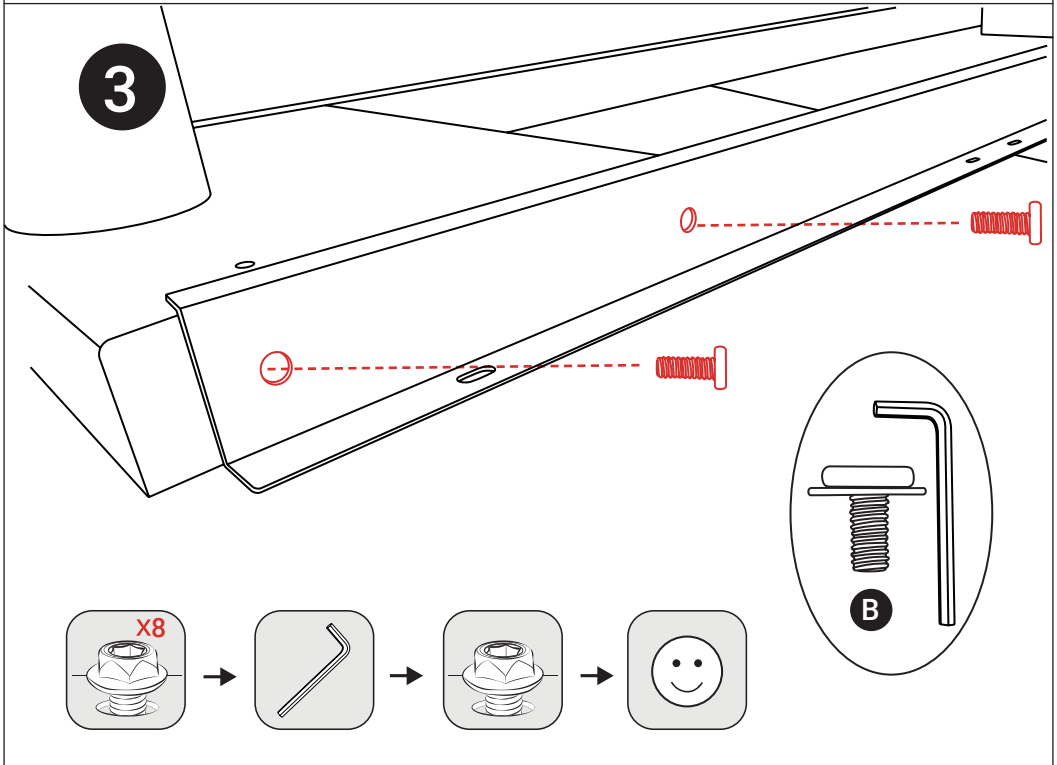


4

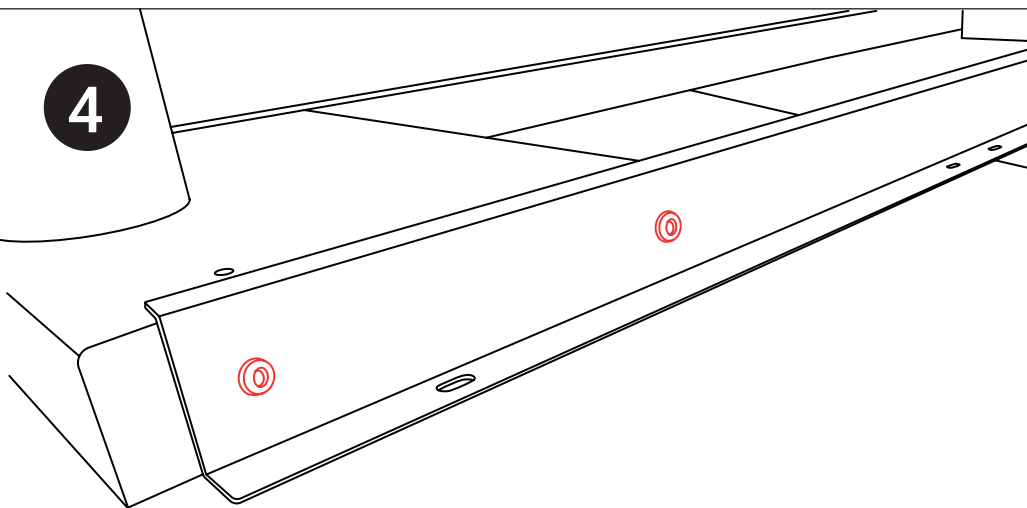


5

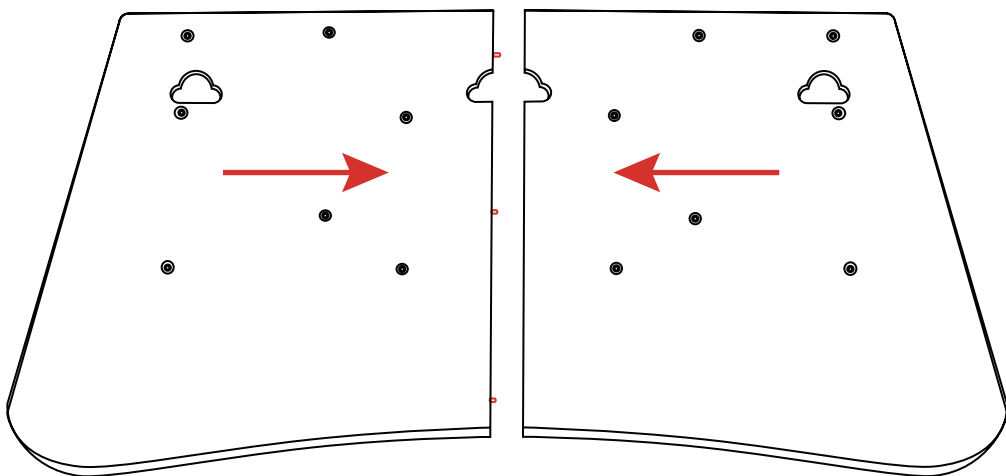



6

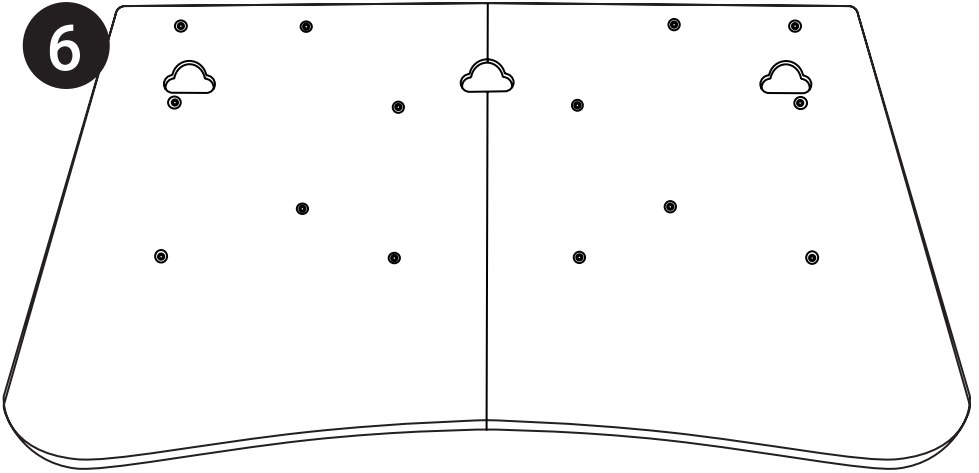


7

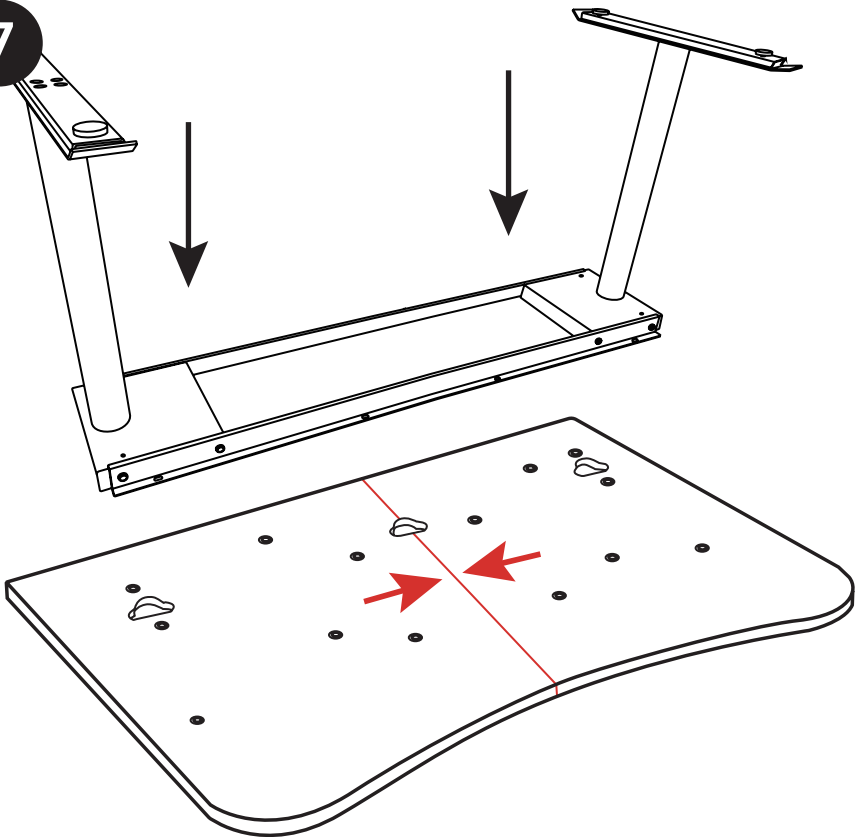




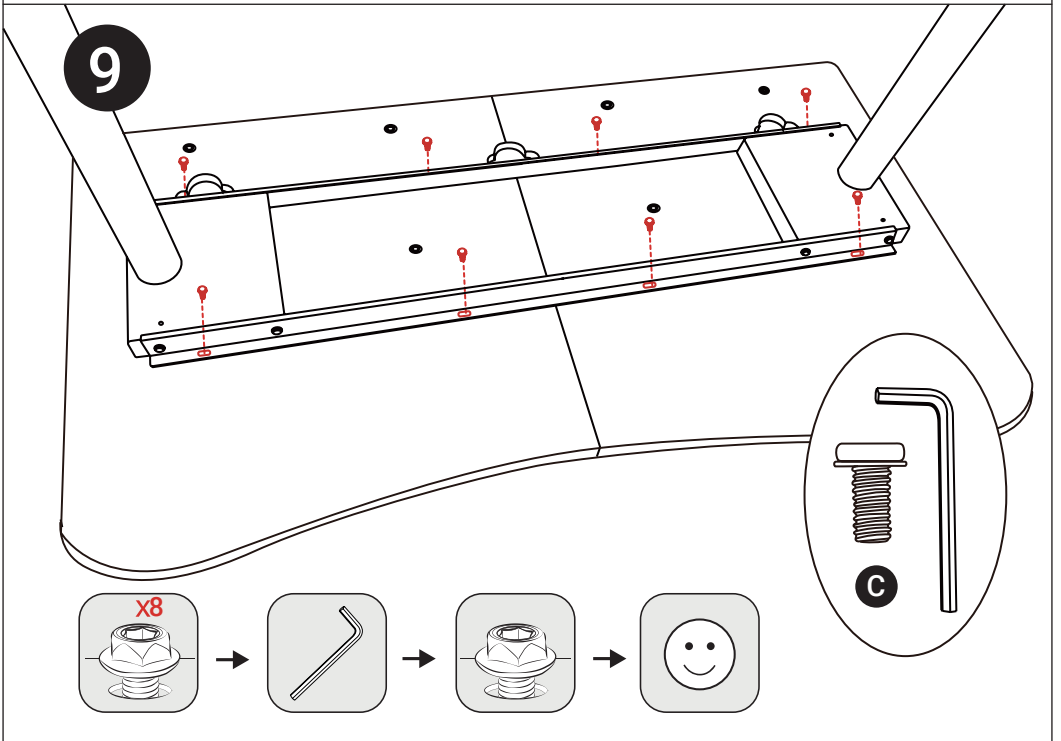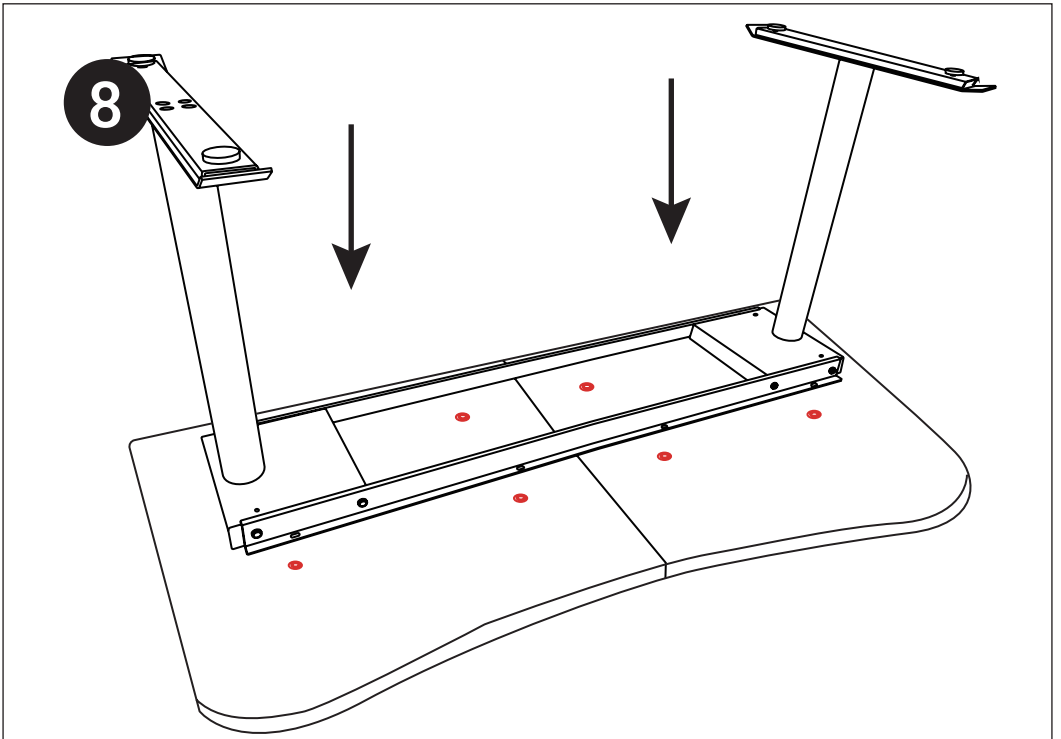



10

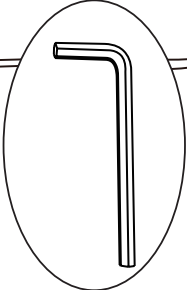

11

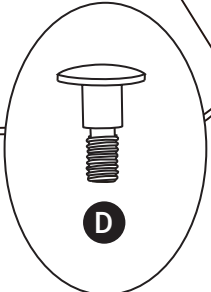

12

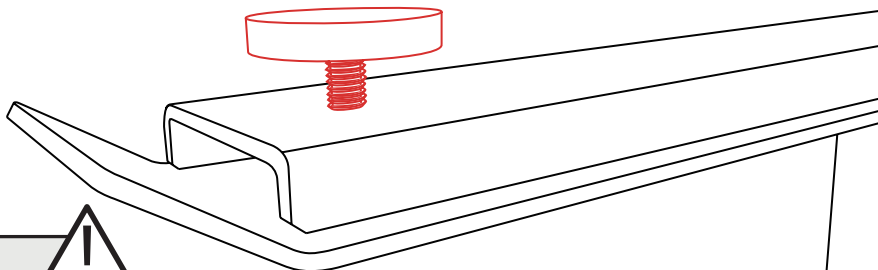

13

